



2½

Faircloth Skimmer®

Instructions for Assembly

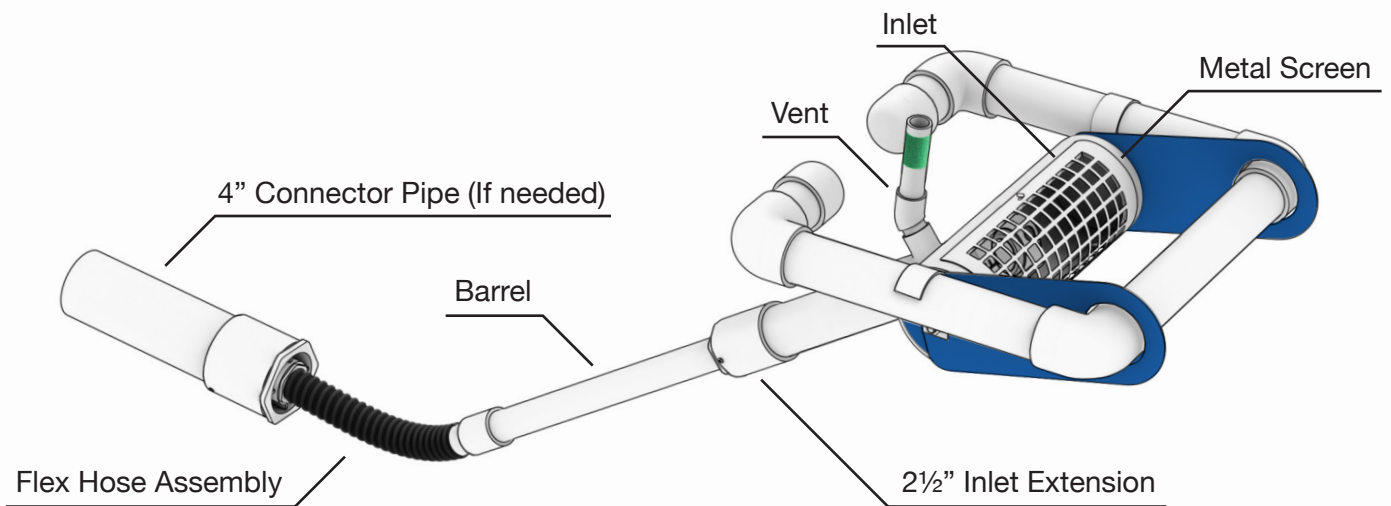


INCLUDED



Pre-attached Orifice Gate



Flex Hose Assembly

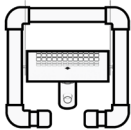


Pre-assembled Skimmer



4" Connector Pipe



Vent



2½" Inlet Extension



50' Rope

NOT INCLUDED



Engineering
Plans



1½" Sch 40 solid PVC
(Recommend 6.5') for Barrel



PVC Pipe
Primer and Glue



Phillips Head
Screwdriver




Measuring
Tool

For more information, please go to our website, FairclothSkimmer.com, or call us at (919)732-1244.

STEP 1

Adjust Orifice Gate

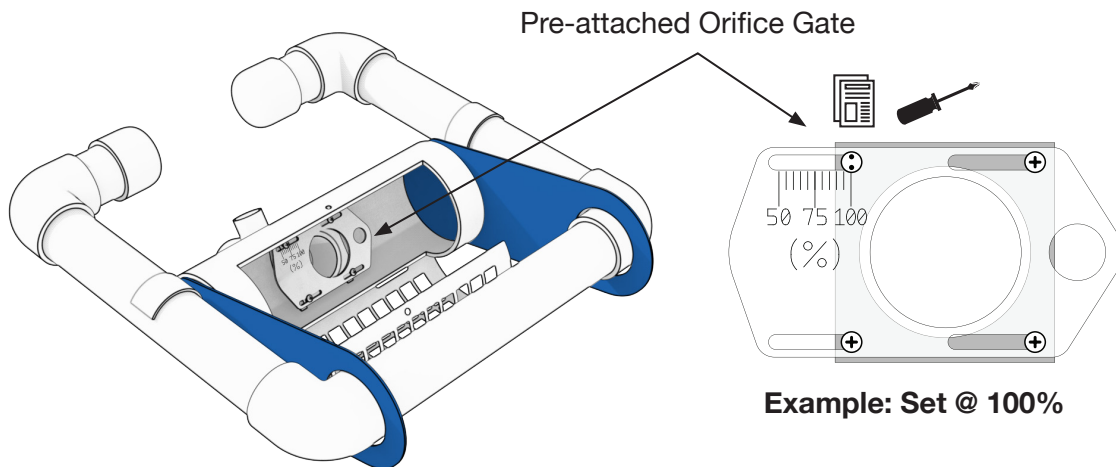


Note: Reference your site engineering plans for correct orifice gate opening percentage.

1A. Open the metal screen and slide the orifice gate until the dots on the indicator screw line up with the opening percentage shown in the plans.

1B. Tighten the 3 Phillips screws to hold the orifice gate in place.

STEP 2

Install Vent and Inlet Extension

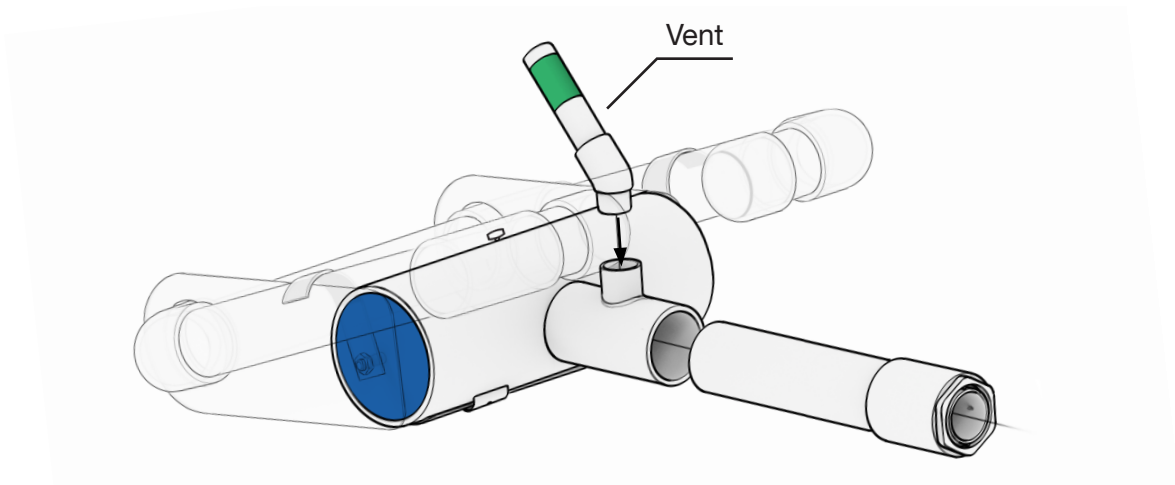


2A. Install the short end of the vent tube into the tee, as shown in the image. You may have to back out the screw before installing and tighten once the vent tube is in place.

2B. Prime and glue the inlet extension into the skimmer.

STEP 3

Connect to Outlet

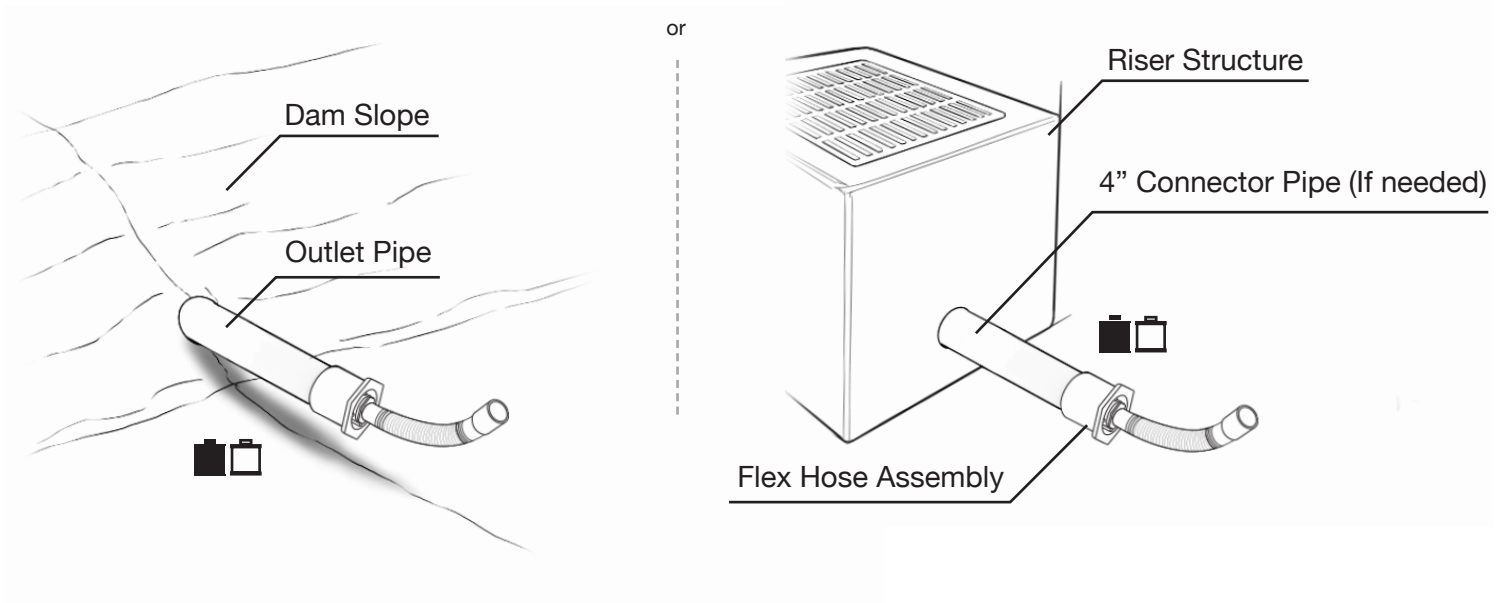


3A. Prime and glue the Flex Hose Assembly to the outlet pipe. The natural curve of the hose should face directly upwards.

3B. If no outlet pipe exists, install the provided 4" Connector Pipe and ensure a water tight seal.

STEP 4


Cut and Attach Barrel

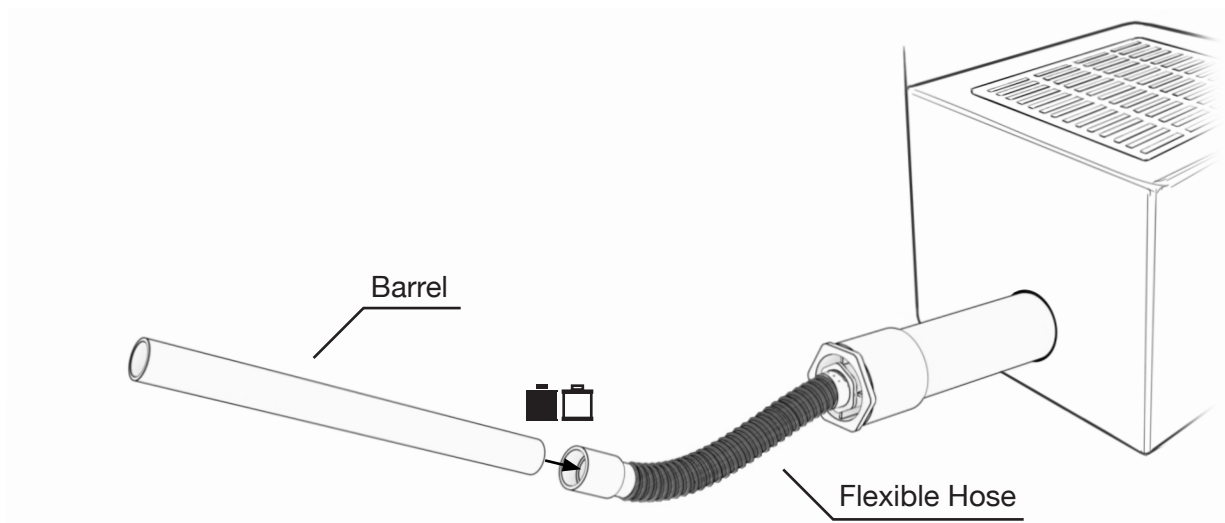

Note: Barrel length should be 1.4 times the depth of the basin (distance from basin bottom to spillway) but not shorter than 6.5'.


4A. Cut the 1.5" PVC pipe to proper length to create the barrel.

4B. Prime and glue the barrel to the Flex Hose Assembly, as shown in the image above.

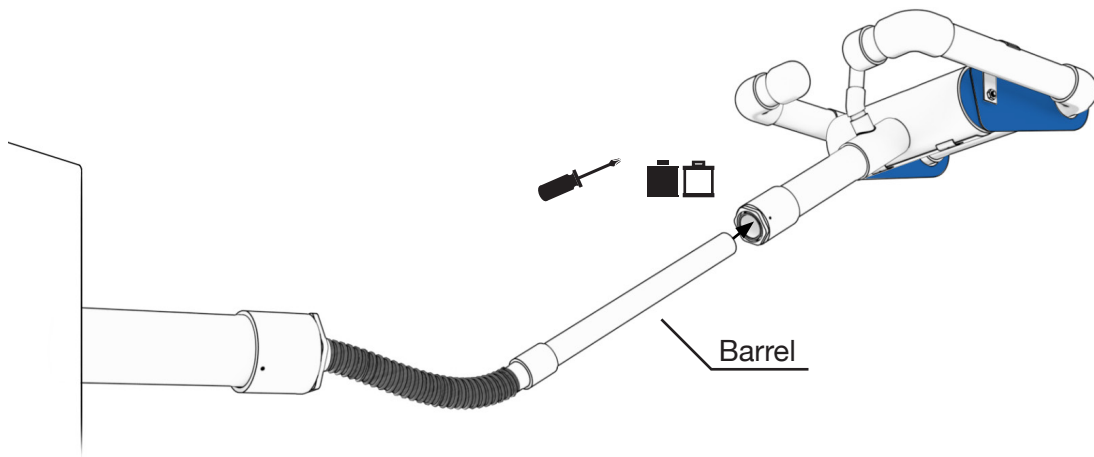STEP 5**Attach Skimmer to Barrel**

5A. Fully insert the barrel into the inlet extension. Primer and glue can be used here if preferred.

5B. Tighten the screw until it pushes against the barrel to secure it.

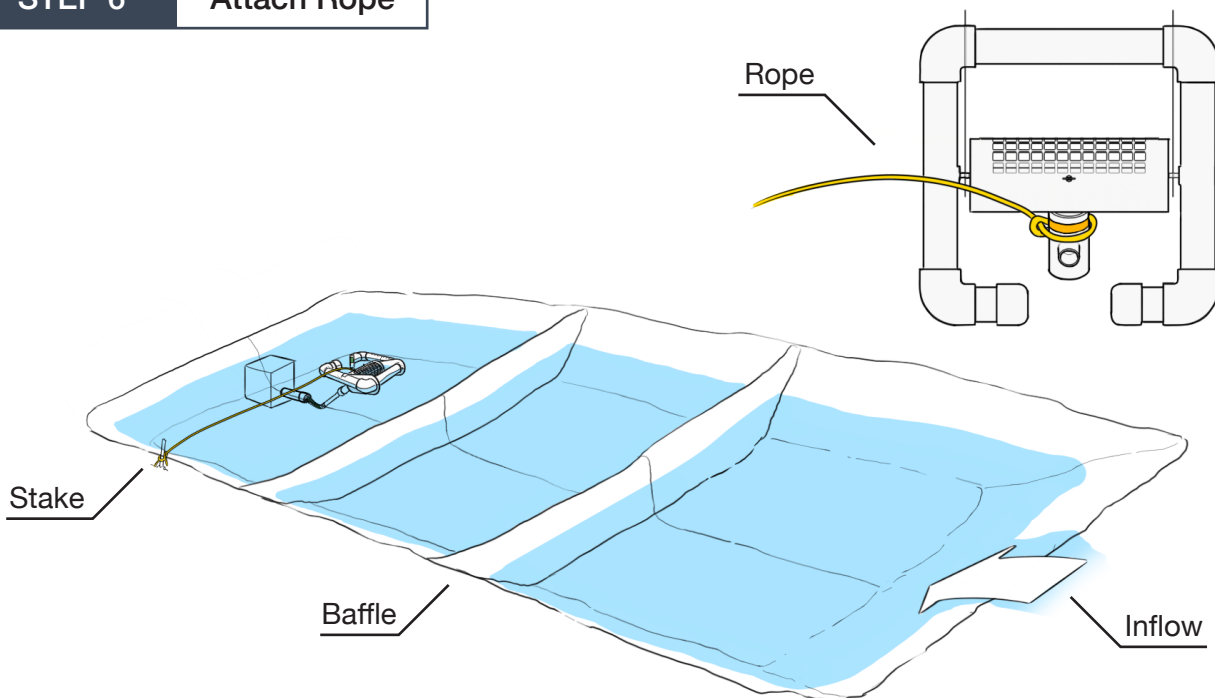STEP 6**Attach Rope**

6A. Attach the rope to the skimmer, as shown in the image, at the yellow sticker.

6B. Attach the other end of the rope to a stake on the side of the basin.