



STEP 5 Attach CPVC Barrel to Skimmer

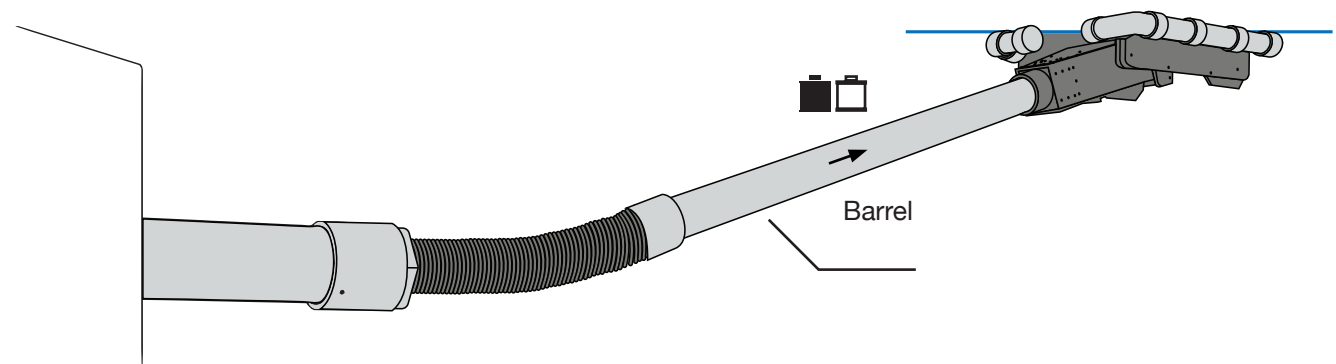


Note: When installing, ensure the barrel and skimmer coupler center points are aligned. If center points are not aligned, the skimmer will not float level and may not perform as specified.

- 5a. Mark top dead center of the barrel.
- 5b. Cement coupler to skimmer using pre-marked lines.
- 5c. Cement barrel to coupler using lines to align.

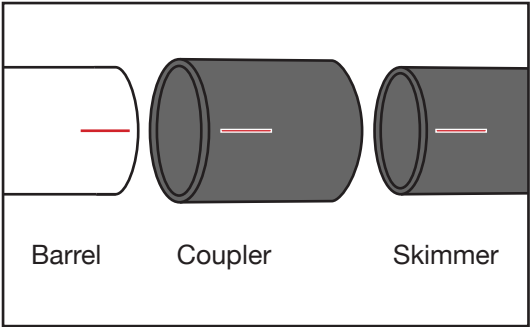

Top view


STEP 6 Attach Rope

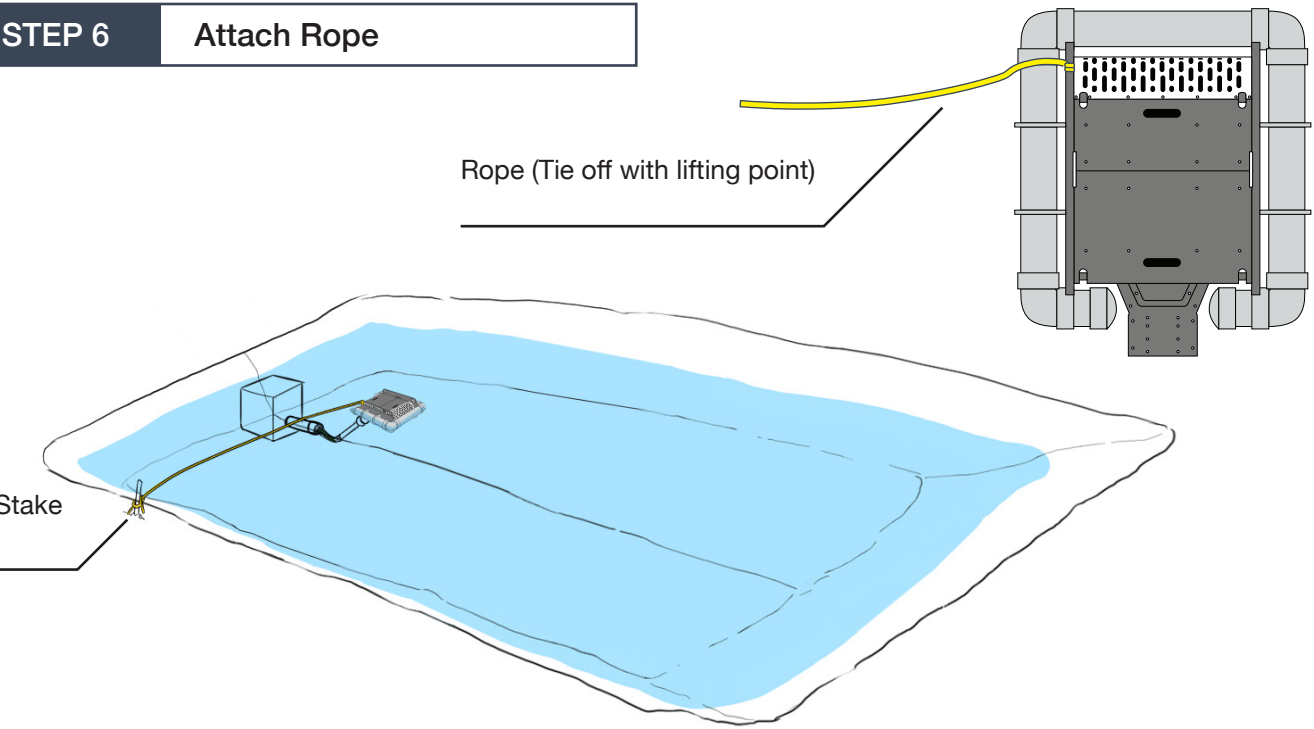


- 6A. Attach the rope to the skimmer, as shown in the image.
- 6B. Attach the other end of the rope to a stake on the side of the basin.

4

Faircloth Skimmer® SCM
Instructions for Assembly

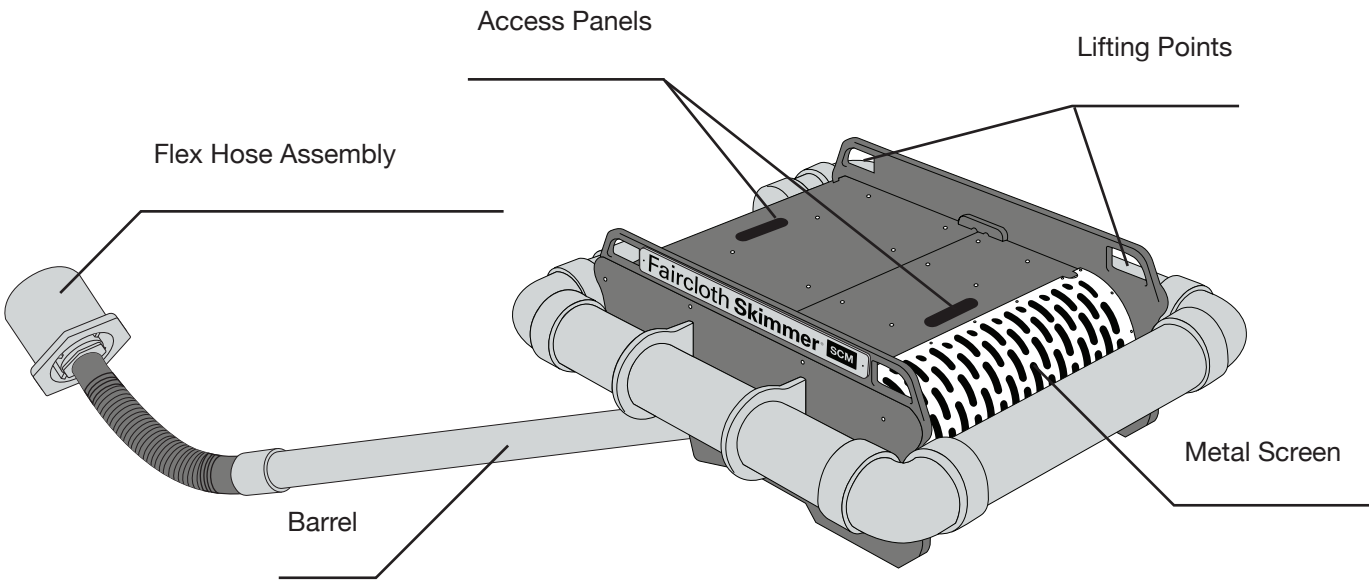

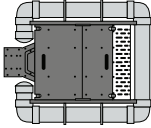INCLUDED			
	Flex Hose Assembly		4" CPVC Connector Pipe
	Pre-assembled Skimmer		4" Coupling
	100' Rope		CPVC Pipe Primer and All Purpose Cement


Note: All Purpose or CPVC Cement is required for installation.

NOT INCLUDED		
		
Engineering Plans	4" Sch 40 solid CPVC (Recommend 8') for Barrel	Measuring Tool

For more information, please go to our website, FairclothSkimmer.com, or call us at (919) 732-1244.

STEP 1 Prep the Skimmer


1. Remove packaging and lift the skimmer off of the pallet and move to the areas where assembly will take place.

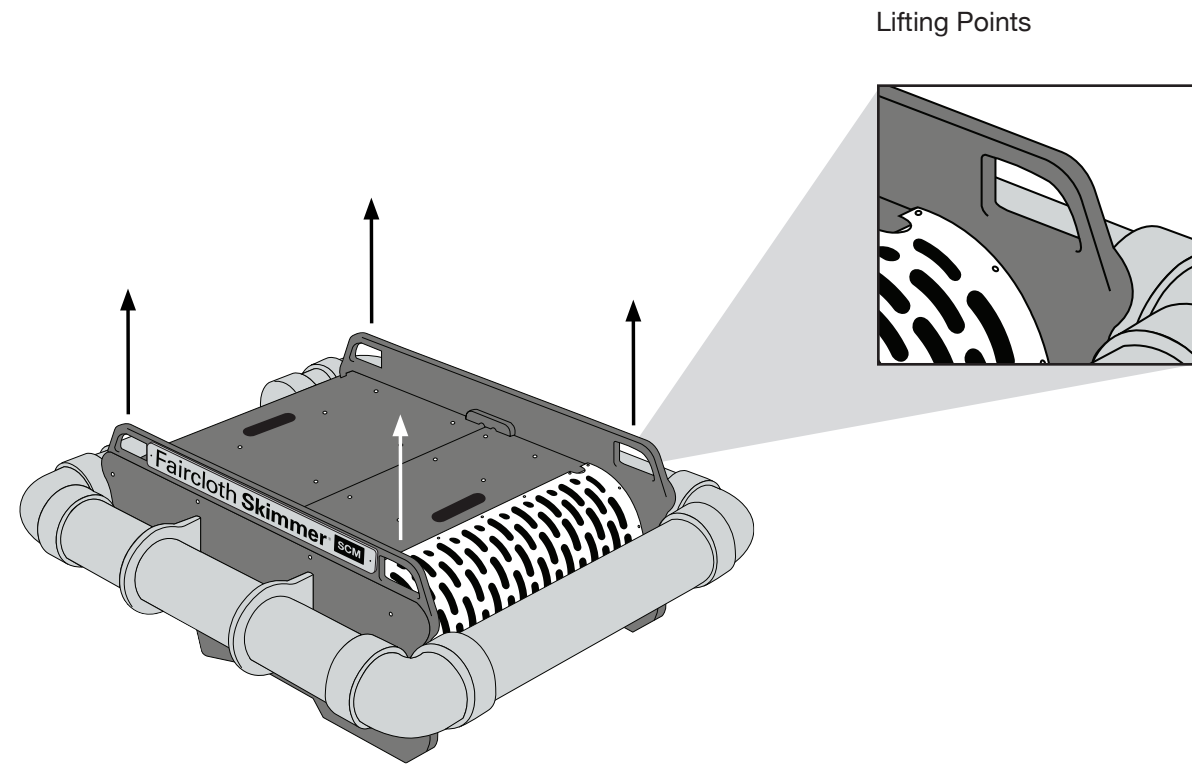

STEP 2 Prep Connection Point


2. Ensure connection point is the correct size and ready to receive the flex hose assembly. If no connection point exists, install the provided section of 4" CPVC pipe into the outlet as your connection point.

Mark top dead center of the connection point pipe. Flex hose assembly comes pre-marked at top dead center.

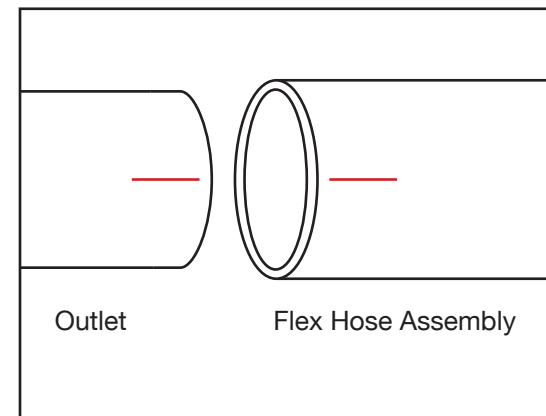


Top view

STEP 3 Connect to Outlet

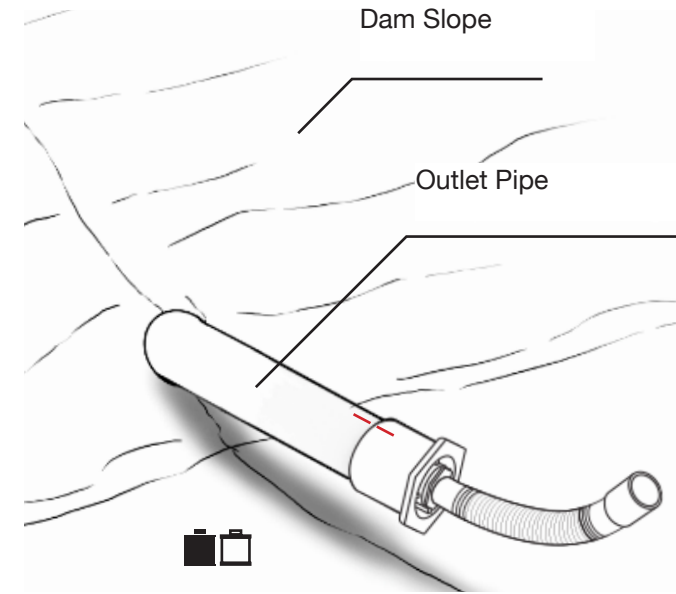


Note: When installing, ensure outlet and flex hose center points are aligned.

3. Prime and cement the Flex Hose Assembly to the 4" outlet pipe and ensure a water tight seal. The natural curve of the flex hose should point directly upwards.

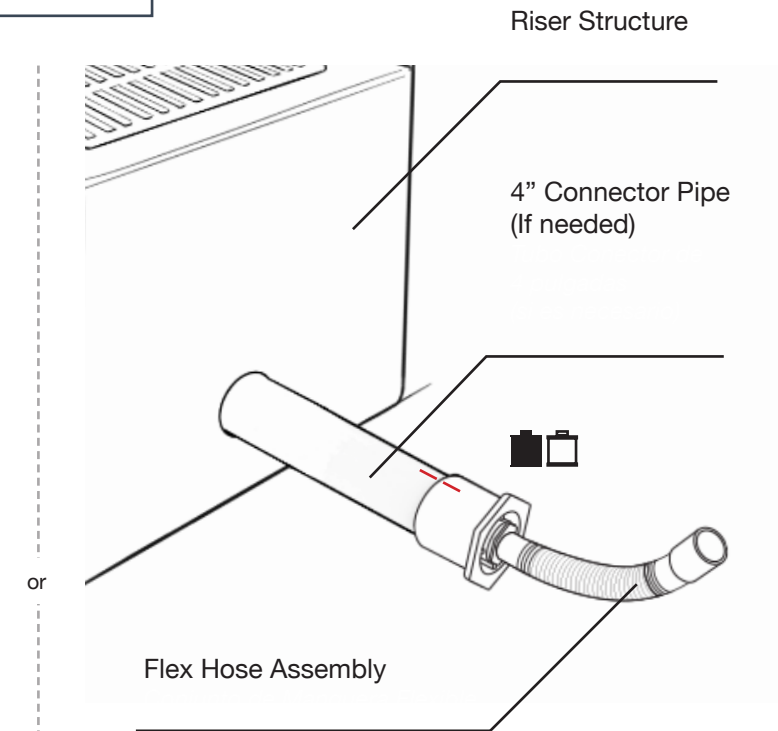

Prime and cement the Flex Hose Assembly to the 4" connector pipe and ensure a water tight seal. The natural curve of the flex hose should point directly upwards.

STEP 4 Cut and Attach CPVC Barrel

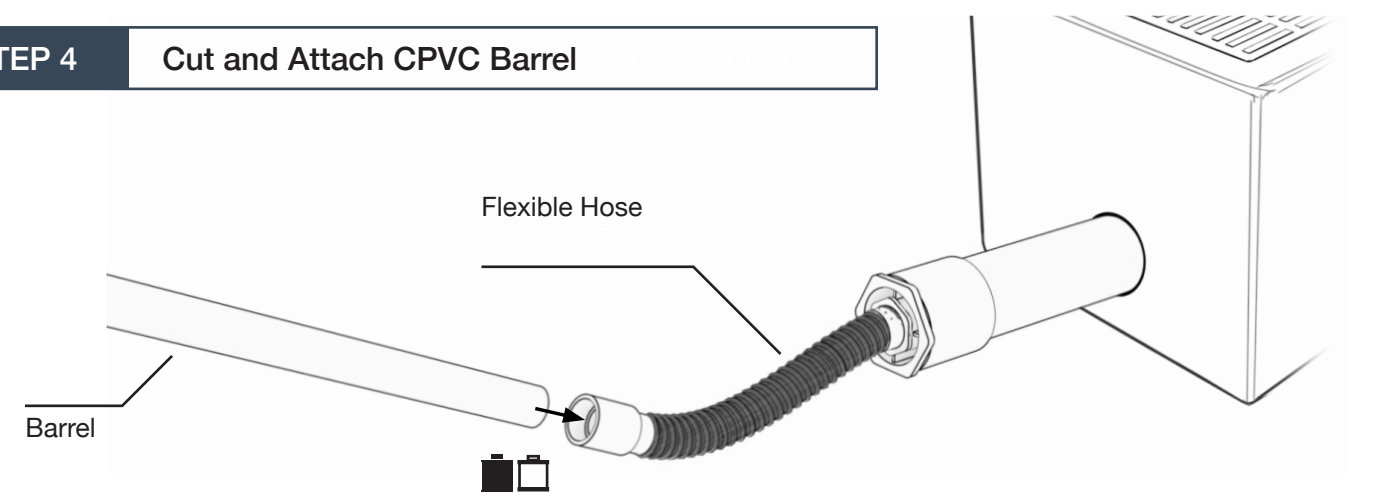

Note: Barrel length should be 8'.

4A. Cut the 4" CPVC pipe to proper length to create the barrel.

4B. Prime and cement the barrel to the Flex Hose Assembly, as shown in the image above.